



Graphic Decals

Part # 03-056

Fits Alpha Body Kit
For Club Car® Precedent®



INSTALLATION INSTRUCTIONS


TOOLS NEEDED

Scissors
Masking Tape
*Squeegee recommended -
(Part# 03-043)

ITEMS INCLUDED

Front Graphic
Rear Passenger Graphic
Rear Driver Graphic

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

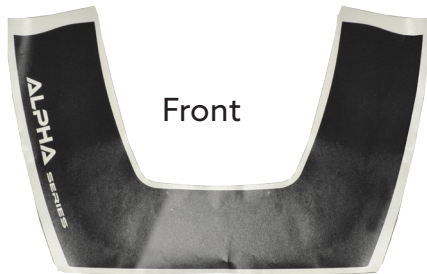

STEP 1

NOTE: Before installing Graphics, wipe down body mounting areas with alcohol wipes.

Trim excess white material a quarter inch from edge of Graphic as shown. (Front decal as shown)



STEP 2

Tape Graphic on body as shown, using the rear body lines as a guide for placement. We recommend starting the graphic where the radius of the front corner ends.

NOTE: Do not tape front portion of graphic to cart, instead leave 8-10" loose as shown.



STEP 3

(A) Peel film from back of graphic halfway.

(B) Cut white film with scissors leaving remainder of film on back of taped down graphic



STEP 4

A) Using squeegee (03-043) start from the center of the graphic and smooth outwards while pulling graphic tight with opposite hand. Hold squeegee at a 45 degree to avoid creases, if a crease occurs simply pull the vinyl back and rework the area. Do not try to remove creases after vinyl is applied.

B) On the opposite end, remove tape and pull white film back but not completely off. Starting from the center of the Graphic, smooth outwards flattening any bubbles while simultaneously pulling the rest of the film off. Be sure to squeegee over all areas, especially on edges.



STEP 5

Once Vinyl is entirely adhered to the body, peel clear protective film off slowly at an extreme angle that is almost flat to the body. Be careful of edges and Alpha lettering. If any bubbles remain, use a razor blade tip to slightly puncture, then smooth over with squeegee (03-043). Repeat steps 1-5 on opposite side.





STEP 6

NOTE: Before installing front graphic, wipe down body with alcohol wipes.

(A) Tape Graphic on body as shown, using the hood edges as a guide.



(B) Secure with masking tape as shown.

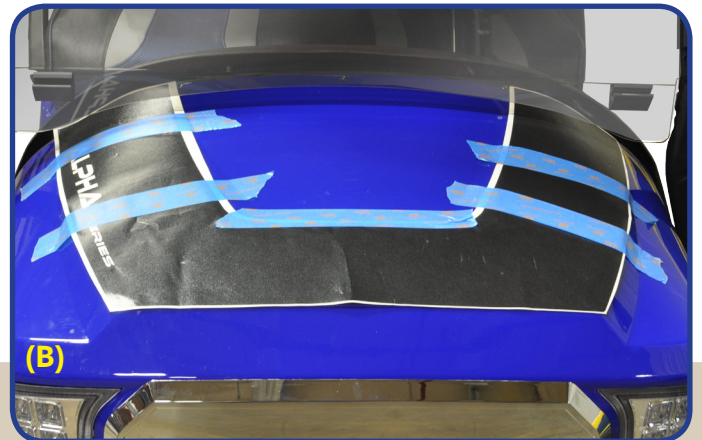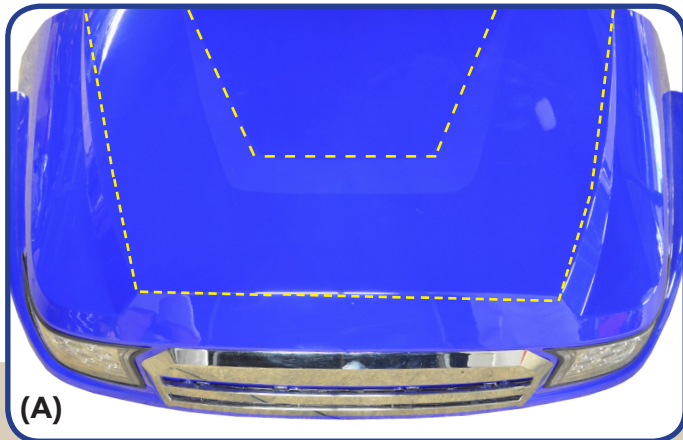

STEP 7

Using the same process from steps 3, 4, and 5 install front cowl graphic as shown.

Starting with the passenger side (A) peel the graphic back and cut off the white excess film. Smooth graphic towards dash. (B) Moving to the middle, work across the bottom and up the driver side towards the dash.

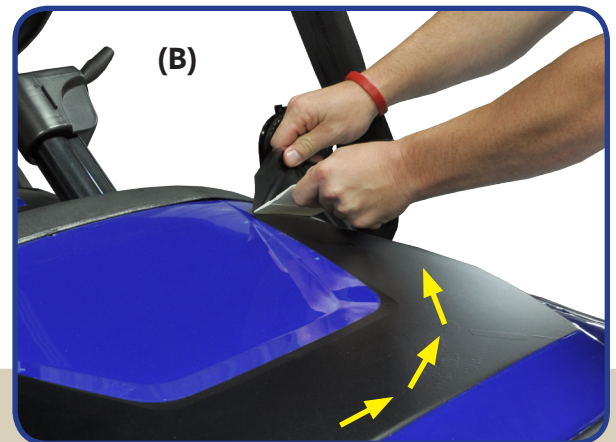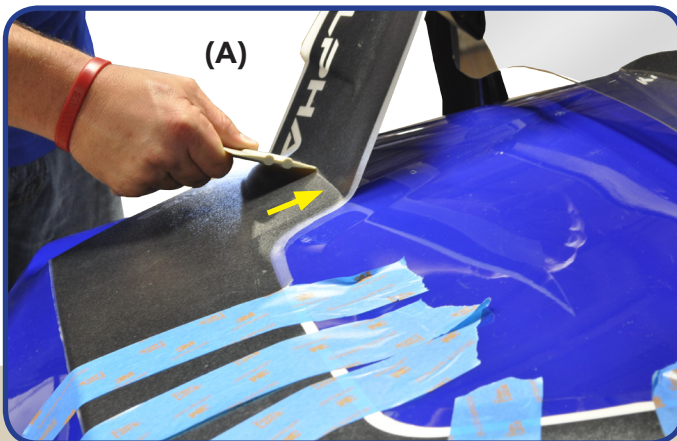

If any air bubbles remain, use a razor blade tip to slightly puncture, then smooth over with Squeegee (03-043).

INSTALLATION COMPLETE

